




Installation Instructions

For Kodlin NXL Floorboards for HD Touring models- K73253

1. Remove your old floorboards.
2. Layout your NXL Floorboards, four mounts and hardware. See picture #1
3. Match the mounts with the bolt hole patterns on the bottom of the Trackboards.
Note: *There is one mount stamped with RL, and it will go on the rear position of left-side floorboard. See Picture #2.*
4. Using medium strength thread locker on all bolts install three bolts in each mount. After you have started all the bolts torque each one to 80-90 In/lbs. See picture #3
5. Install Trackboards using supplied hardware. Apply medium strength thread locker to bolts, install nuts and torque to 60-80 in/lbs.

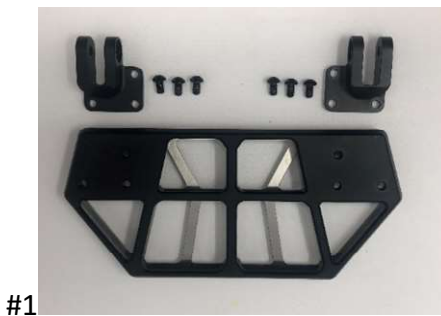

#1



#2



#3

For the latest install guides, videos, FAQ's, and Tech-Tip's scan QR code!



Revision Date: 5/22/2025

www.kodlinusa.com