



Installation Instructions


For

Kodlin Rear Load Balancer Kit for H-D M8 Softail models – KUS11801

A FACTORY SERVICE MANUAL WILL BE HELPFUL IN PERFORMING THIS INSTALLATION. DO NOT ATTEMPT TO PERFORM THIS INSTALLATION IF YOU ARE NOT CONFIDENT IN YOUR ABILITY TO COMPLETE ALL OF THE STEPS IN THE PROCEDURE; CONSULT A TRAINED TECHNICIAN. IMPROPER INSTALLATION COULD RESULT IN SERIOUS INJURY OR DEATH.

1. Disconnect the two four wire connectors under the seat along the right frame rail. One will be grey and the other will be black. See picture #1, highlighted by yellow oval.
2. Plug the load balancer in series with the existing connectors.
3. Follow procedures for clearing any DTC or codes. Then run flashers at least 10 flashes and turn them off. Test for hyper flashing at the instrument turn indicators while using the left and right turn signals. If hyper flashing continues you may need to repeat this step.

Note: Make sure to wire 3-1 Neowise lights per the wiring guide labeled “[M8 Softail OEM Light Harness to 3-1 LED Lights](https://kodlinusa.com/tech-guide/#installation-guide)” located at <https://kodlinusa.com/tech-guide/#installation-guide>.

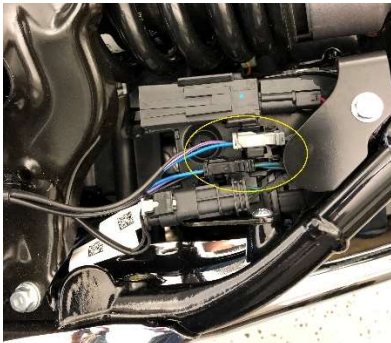

Picture #1



Picture #2

NOTE: No warranty coverage is provided by Kodlin that is due to improper installation or lack of maintenance. Periodic maintenance and inspection are required. It is the installer's responsibility to ensure that all the fasteners are tightened before operation of the motorcycle. We recommend following the Mfg.'s torque specs.

For the latest install guides, videos, FAQ's. and Tech-Tip's scan QR code!



Revision Date: 6/23/2025

www.kodlinusa.com